

USING THE SOLARIS REMOTE ACCESS SYSTEM

Solaris radiant heating panels (type VFR) are each equipped with a wireless remote thermostat named Caleo which must be installed in the same room as the panel. It is also possible to program Caleo to operate at certain times of the day by using the remote control programmer named Chrono. In order for the remote access system to operate correctly, one must initialize each radiant heating panel, linking it to both the thermostat and the programmer, by following these procedures:

1. To initialize the Wireless Thermostat "Caleo"

First, find the white manufacturer's label which shows the product code and the date of fabrication. This is found on the receptor attached to the bottom side of the panel. It is necessary to pass a magnet inside so it can be used for this function in the initialization process.

After having located the manufacturer's label on the receptor, slowly pass Caleo across this part of the receptor until the red light on the front of the receptor flashes rapidly. While the red light is flashing move the switch on the face of the thermostat upward into the "on" position. If the initialization has been completed correctly, the red lights on the Caleo and the receptor will flash simultaneously for a few seconds. This means that you have successfully linked the panel to the wireless thermostat. You can then repeat this procedure for each radiant panel.

2. To initialize the Remote Control Programmer "Chrono"

After each radiant panel has been initialized by Caleo, it is then possible to link several panels to the remote control programmer Chrono. This process follows the same principle as in the initialization of Caleo.

Please note:

It is essential that each Caleo thermostat be turned OFF during the initialization process.

First choose the zone in which you would like to program your radiant panel by pressing the double arrow key. Then pass the bottom of Chrono Programmer (which also contains a magnet) across the manufacturer's label. When the red light on the receptor begins to flash, press the left arrow key on the programmer and while keeping it pushed in, press the right arrow key. Hold both of them until the display reads "Init". If the initialization process has been completed correctly, the red lights on the programmer and on the receptor will flash simultaneously for a few seconds. This means that you have successfully linked the current panel to a specific zone through the programmer. You can then carry out this procedure for all the radiant panels that you are installing.